

ACML100

Lecture 6

Determination of rate law

- Isolation method: Add large excess
- Methods of initial rate: measurement of rate of reaction for several different initial concentration of reactants.

Isolation Method

- Suppose a reaction involves two reactants, A and B.
- $\vartheta = k[A]^{\alpha}[B]^{\beta}$
- To determine the order of reaction with respect to A, we will take B in large excess. $[B] \approx [B]_0$

$$\vartheta = k[A]^{\alpha}[B]_0^{\beta}$$

$$\vartheta = k'[A]^{\alpha}$$

Methods of Initial Rates

- Suppose a reaction involves two reactants A and B.
- $\vartheta = k[A]^{\alpha}[B]^{\beta}$
- The rate of reactions is determined at initial stage of the reaction where $[A] \sim [A]_0$ and $[B] \sim [B]_0$.
- $\vartheta = k[A]_0^{\alpha}[B]_0^{\beta}$

Methods of Initial Rates

- Change the initial concentration of A keeping the initial concentration of B constant

$$v' = k[A]_0'^{\alpha} [B]_0^{\beta}$$


$$\frac{v'}{v} = \left(\frac{[A]_0'}{[A]_0} \right)^{\alpha}$$

Methods of Initial rates

- If the reaction is of first order with respect to A
- $\frac{v'}{v} = \left(\frac{[A]_0'}{[A]_0} \right)$
- If the reaction is of second order with respect to A
- $\frac{v'}{v} = \left(\frac{[A]_0'}{[A]_0} \right)^2$

Integrated Rate law in terms of Physical Parameter

- Total pressure of a gaseous reaction
- Total volume of a reaction involving liquids
- Optical rotation of the reacting sample involving optically active compound
- Conductivity of a reacting sample involving ions.
- Absorbance of reacting sample involving compounds absorbing in UV-Vis range.

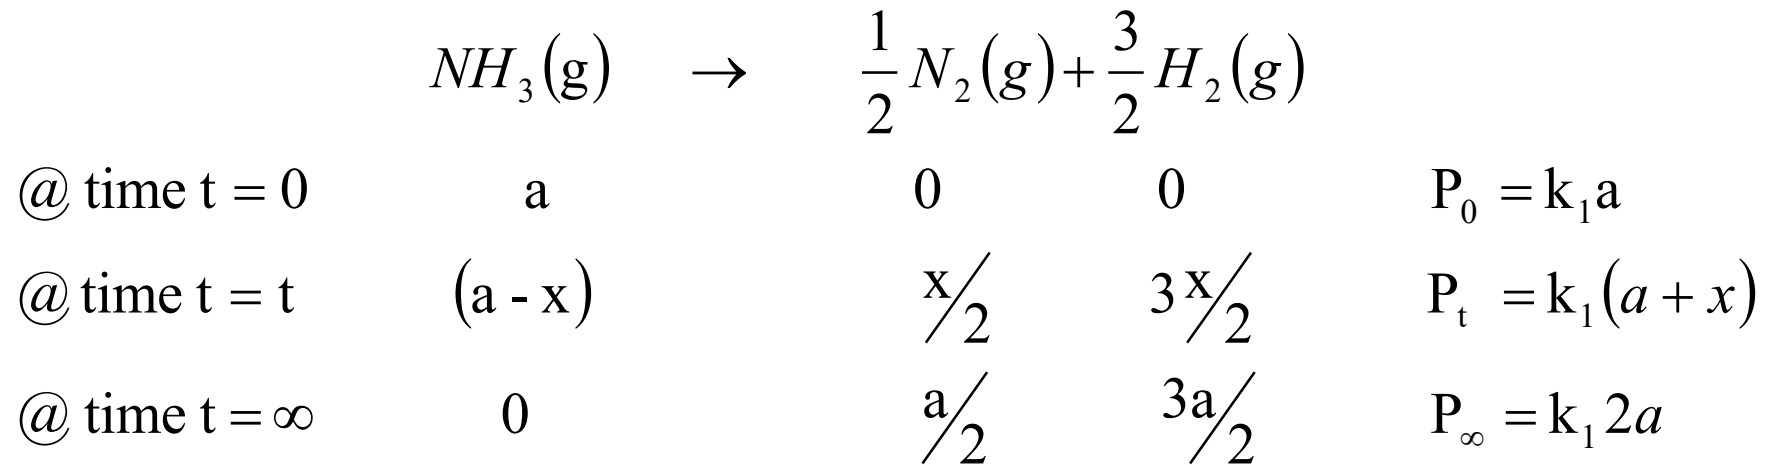

$$P_t - P_\infty = -k_1(a - x)$$

$$P_0 - P_\infty = -k_1 a$$

$$\frac{P_t - P_\infty}{P_0 - P_\infty} = \frac{(a - x)}{a}$$

	A	$\rightarrow$	P	
@ time $t = 0$	a		0	$Y_0 = k_1 a$
@ time $t = t$	$(a - x)$		x	$Y_t = k_1(a - x) + k_2 x$
@ time $t = \infty$	0		a	$Y_\infty = k_2 a$

$$Y_t - Y_\infty = k_1(a - x) - k_2(a - x) = (k_1 - k_2)(a - x)$$

$$Y_0 - Y_\infty = (k_1 - k_2)a$$

$$\frac{Y_t - Y_\infty}{Y_0 - Y_\infty} = \frac{(a - x)}{a}$$

-

	A	$+$	$3B$	$\rightarrow$	$2C$	$+$	D	
@ time $t = 0$	a		b		0		0	$Y_0 = k_1 a + k_2 b$
@ time $t = t$	$(a - x)$		$(b - 3x)$		$2x$		x	$Y_t = k_1(a - x) + k_2(b - 3x) + k_3(2x) + k_4(x)$
@ time $t = \infty$	0		$(b - 3a)$		$2a$		a	$Y_\infty = k_2(b - 3a) + k_3(2a) + k_4 a$

$$Y_t - Y_\infty = -(a - x)(2k_3 + k_4 - k_1 - 3k_2)$$

$$Y_0 - Y_\infty = -a(2k_3 + k_4 - k_1 - 3k_2)$$

$$\frac{Y_t - Y_\infty}{Y_0 - Y_\infty} = \frac{(a - x)}{a}$$

For a first order reaction

$$\ln \frac{[A]_0}{[A]} = \ln \frac{a}{(a - x)} = kt$$

$$\ln \frac{[A]_0}{[A]} = \ln \frac{Y_0 - \check{Y}_\infty}{Y_t - Y_\infty} = kt$$

For a second order reaction

$$\frac{1}{[A]} - \frac{1}{[A]_0} = kt$$

$$\frac{[A]_0}{[A]} - 1 = kt[A]_0$$

$$\frac{[A]_0}{[A]} = kt[A]_0 + 1$$

$$\frac{Y_0 - Y_\infty}{Y_t - Y_\infty} = kt[A]_0 + 1$$

Guggenheim Method

$$\ln \left(\frac{P_t - P_\infty}{P_0 - P_\infty} \right) = -kt$$

$$\left(\frac{P_t - P_\infty}{P_0 - P_\infty} \right) = \exp(-kt)$$

$$(P_t - P_\infty) = (P_0 - P_\infty) \exp(-kt)$$

$$P_t = (P_0 - P_\infty) \exp(-kt) + P_\infty$$

$$P_{t+\tau} = (P_0 - P_\infty) \exp[-k(t + \tau)] + P_\infty$$

$$P_t - P_{t+\tau} = (P_0 - P_\infty)(1 - \exp(-k\tau)) \exp(-kt)$$

$$\ln(P_t - P_{t+\tau}) = \ln(P_0 - P_\infty) + \ln(1 - \exp(k\tau)) - kt$$

Kezdy Swinbourne Method

$$(P_t - P_\infty) = (P_0 - P_\infty) \exp(-kt)$$

$$P_{t+\tau} - P_\infty = (P_0 - P_\infty) \exp[-k(t + \tau)]$$

$$\frac{(P_t - P_\infty)}{(P_{t+\tau} - P_\infty)} = \exp(k\tau)$$

$$(P_t - P_\infty) = (P_{t+\tau} - P_\infty) \exp(k\tau)$$

$$P_t = (1 - \exp(k\tau))P_\infty + P_{t+\tau} \exp(k\tau)$$